



# MEASUREMENT REPORT



Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx  
Workspace: PROGRAM\_MARZO  
Project: G3623A\_30026505\_02 - pieza 1

Part name: G3623A  
Part number: 30026505  
Drawing : S/R  
Device: MESS-BRAA-003

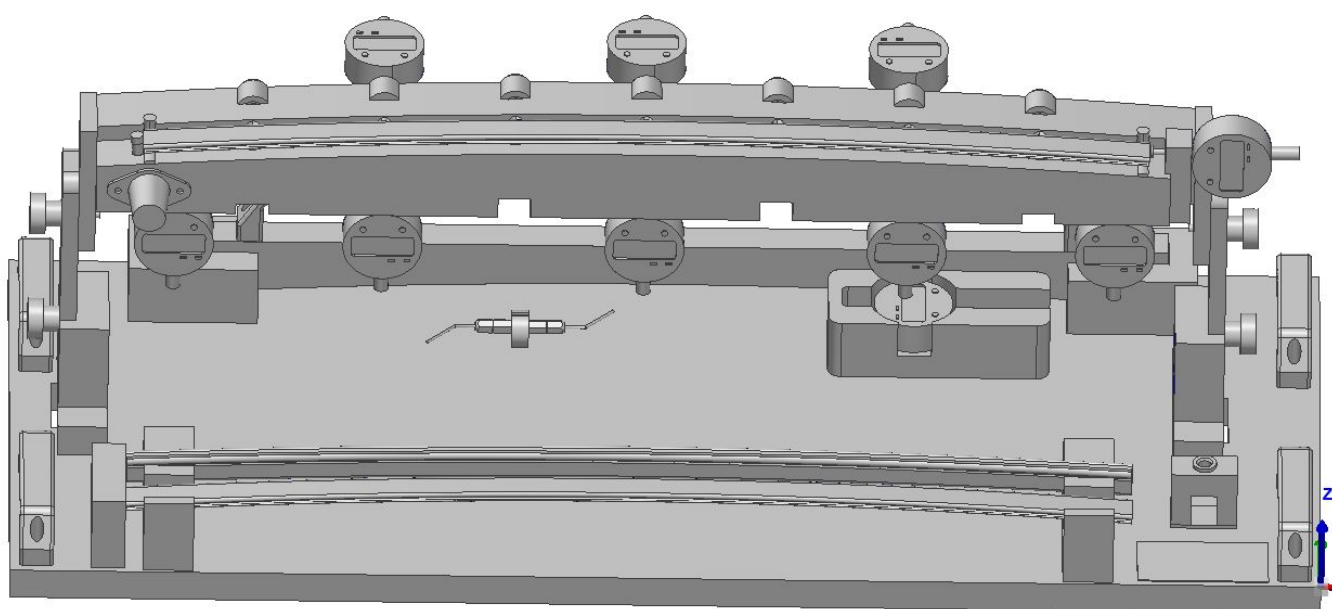

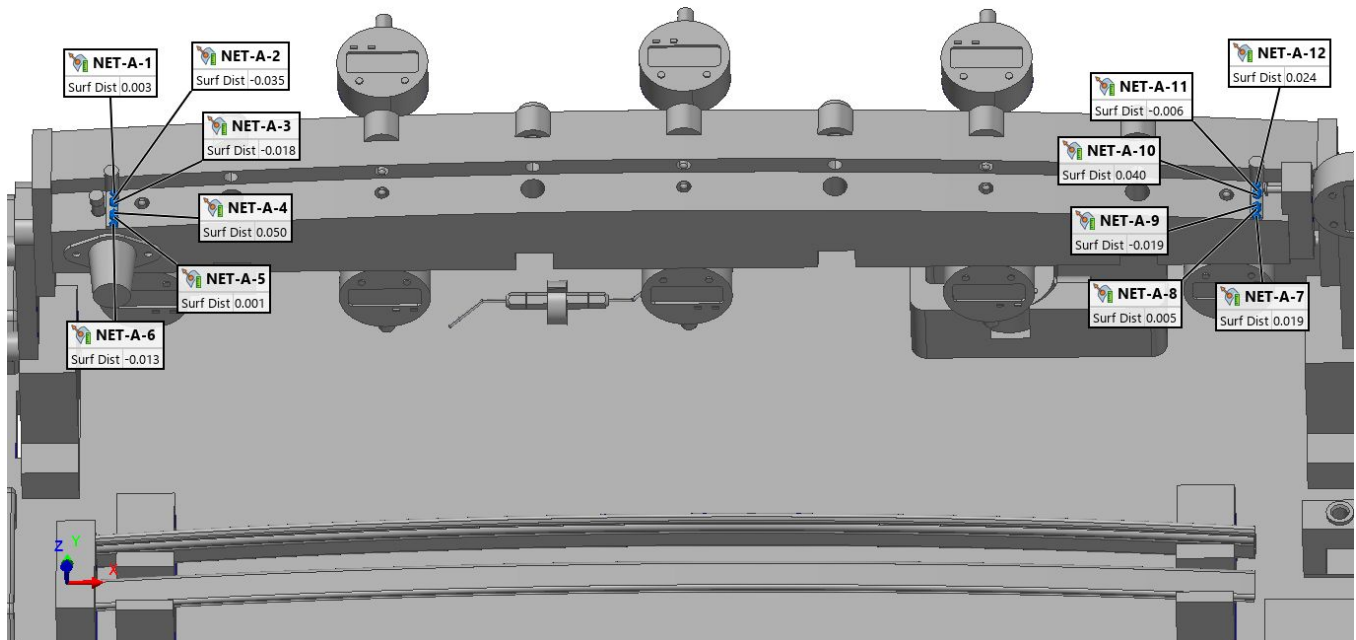

## Comparison Point Table


Units Millimeters

| Name     | Control          | Nom | Meas   | Tol    | Dev    | Test |
|----------|------------------|-----|--------|--------|--------|------|
| NET-A-1  | Surface Distance |     | 0.003  | ±0.050 | 0.003  | Pass |
| NET-A-2  | Surface Distance |     | -0.035 | ±0.050 | -0.035 | Pass |
| NET-A-3  | Surface Distance |     | -0.018 | ±0.050 | -0.018 | Pass |
| NET-A-4  | Surface Distance |     | 0.050  | ±0.050 | 0.050  | Pass |
| NET-A-5  | Surface Distance |     | 0.001  | ±0.050 | 0.001  | Pass |
| NET-A-6  | Surface Distance |     | -0.013 | ±0.050 | -0.013 | Pass |
| NET-A-7  | Surface Distance |     | 0.019  | ±0.050 | 0.019  | Pass |
| NET-A-8  | Surface Distance |     | 0.005  | ±0.050 | 0.005  | Pass |
| NET-A-9  | Surface Distance |     | -0.019 | ±0.050 | -0.019 | Pass |
| NET-A-10 | Surface Distance |     | 0.040  | ±0.050 | 0.040  | Pass |
| NET-A-11 | Surface Distance |     | -0.006 | ±0.050 | -0.006 | Pass |
| NET-A-12 | Surface Distance |     | 0.024  | ±0.050 | 0.024  | Pass |

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1



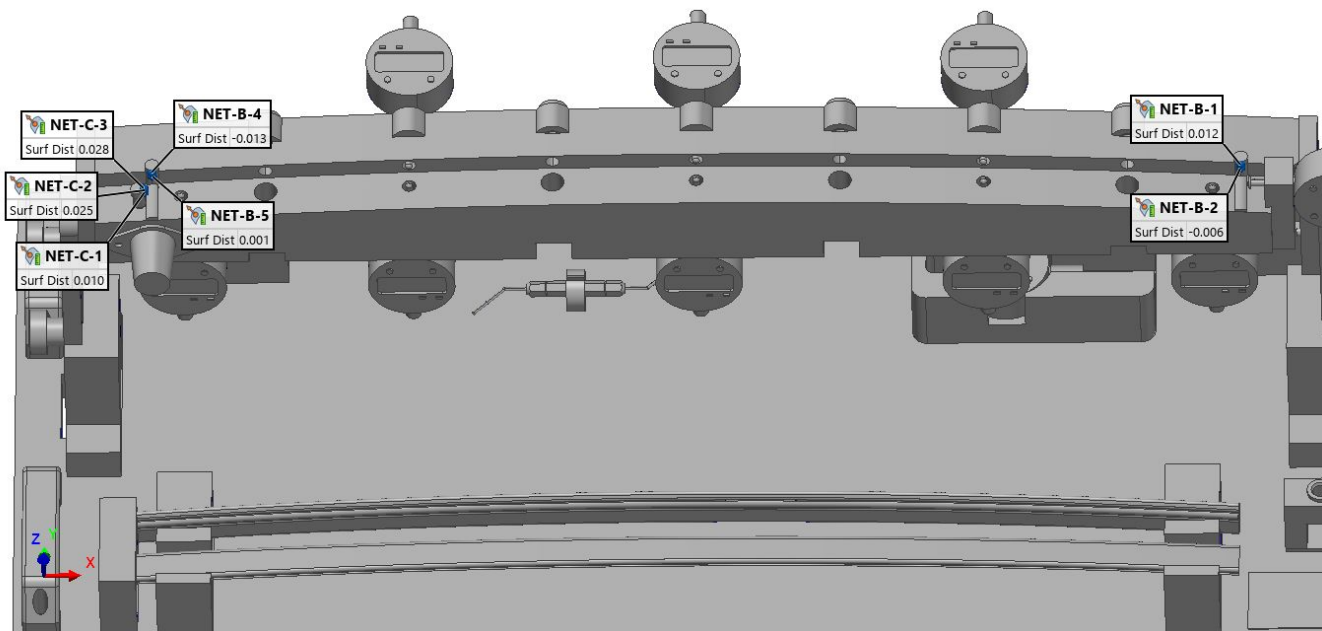

## Comparison Point Table



Units Millimeters

| Name    | Control          | Nom | Meas   | Tol    | Dev    | Test |
|---------|------------------|-----|--------|--------|--------|------|
| NET-B-1 | Surface Distance |     | 0.012  | ±0.050 | 0.012  | Pass |
| NET-B-2 | Surface Distance |     | -0.006 | ±0.050 | -0.006 | Pass |
| NET-B-4 | Surface Distance |     | -0.013 | ±0.050 | -0.013 | Pass |
| NET-B-5 | Surface Distance |     | 0.001  | ±0.050 | 0.001  | Pass |
| NET-C-1 | Surface Distance |     | 0.010  | ±0.050 | 0.010  | Pass |
| NET-C-2 | Surface Distance |     | 0.025  | ±0.050 | 0.025  | Pass |
| NET-C-3 | Surface Distance |     | 0.028  | ±0.050 | 0.028  | Pass |

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1




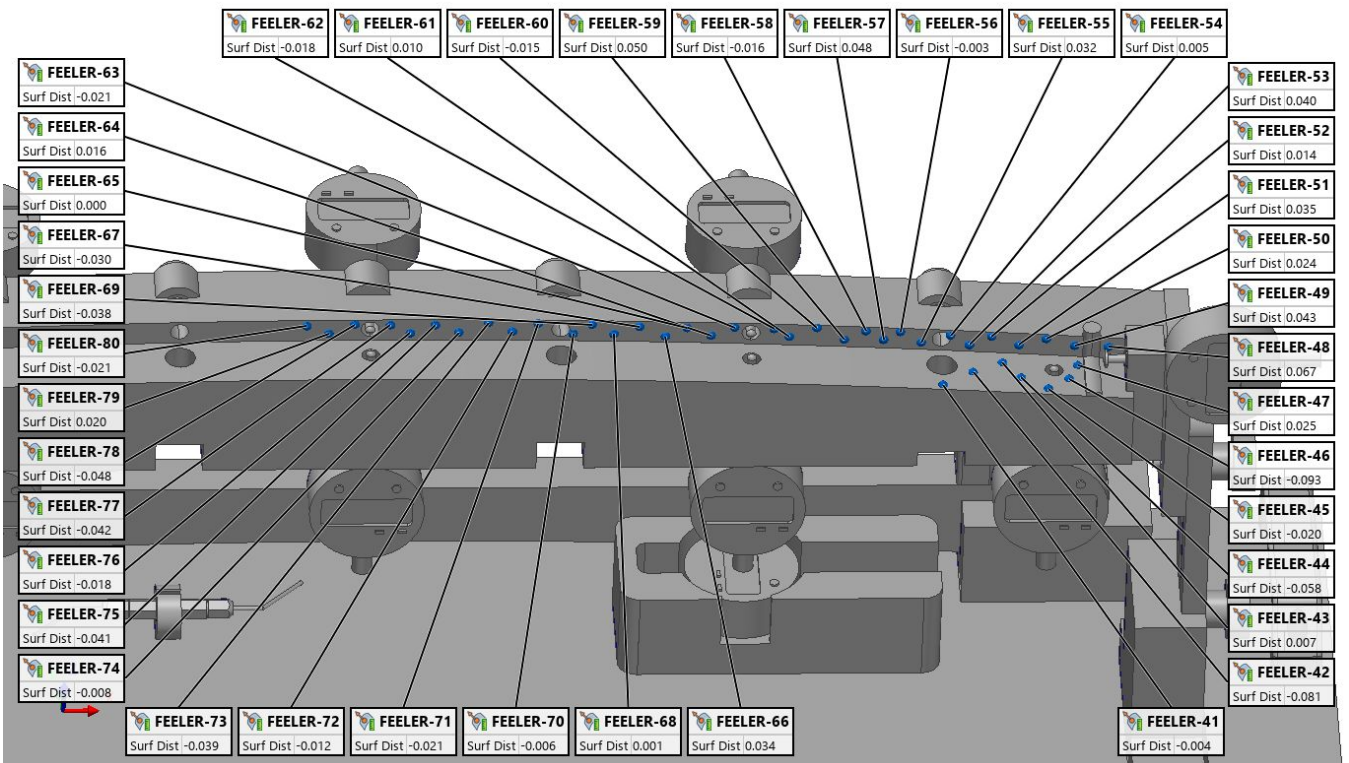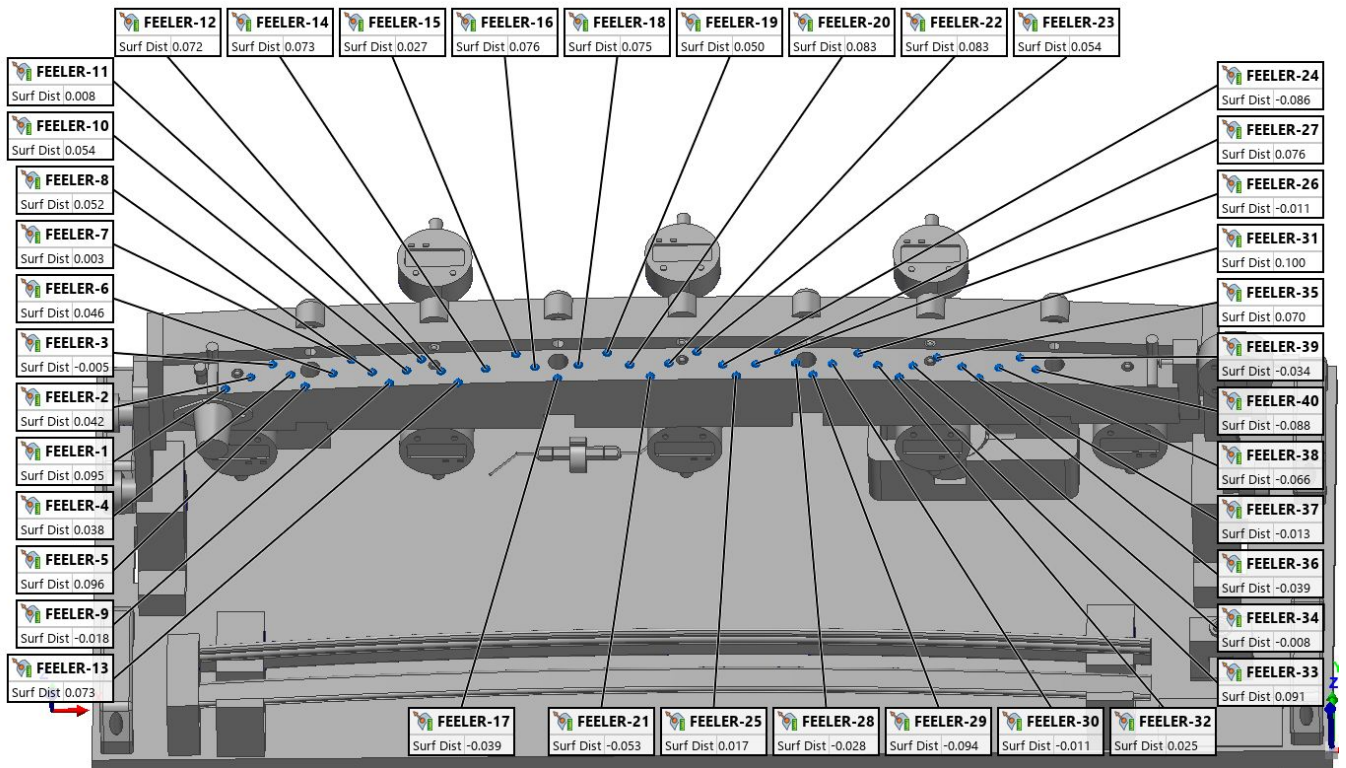

Customer: WHITEHALL INDUSTRIES  
 Operator: Felipe Martinez  
 E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
 Part number: 30026505  
 Piece: pieza 1



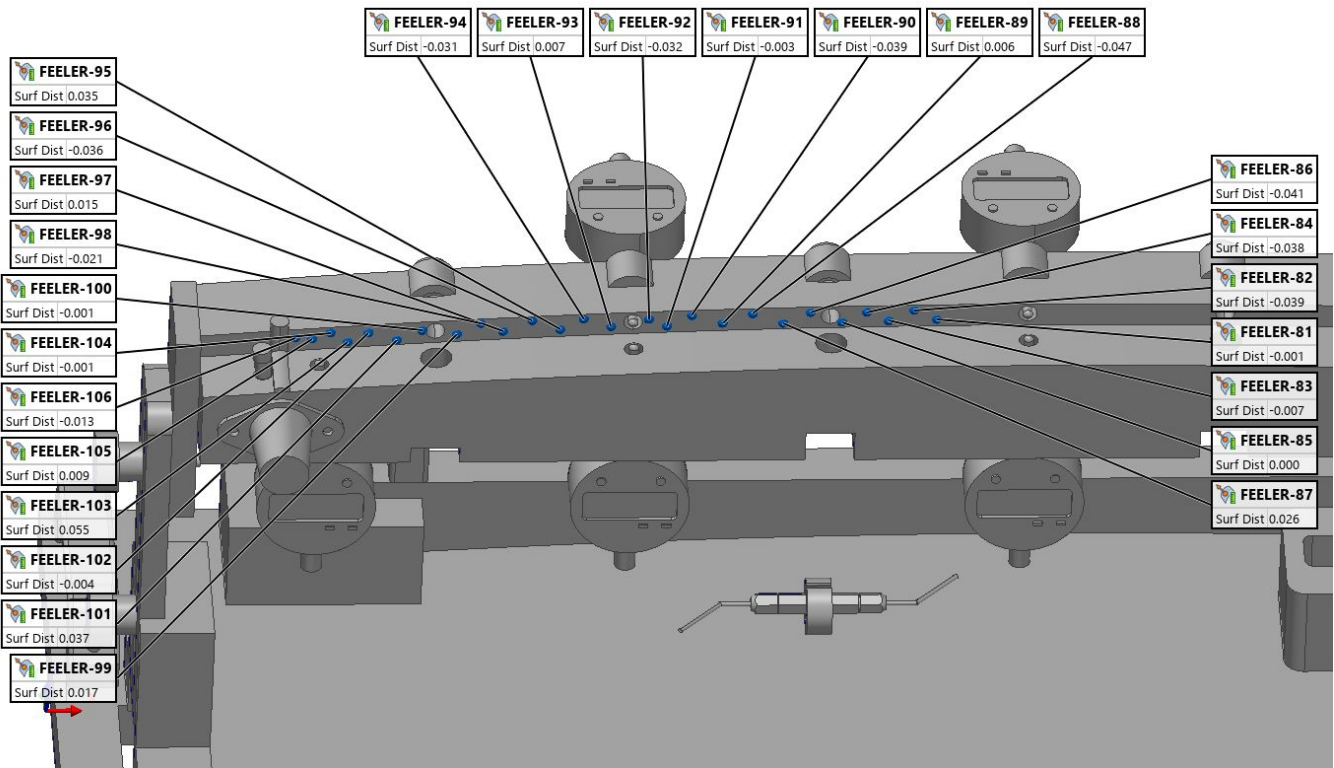

## Comparison Point Table

Units Millimeters

| Name      | Control          | Nom | Meas   | Tol    | Dev    | Test |
|-----------|------------------|-----|--------|--------|--------|------|
| FEELER-1  | Surface Distance |     | 0.095  | ±0.100 | 0.095  | Pass |
| FEELER-2  | Surface Distance |     | 0.042  | ±0.100 | 0.042  | Pass |
| FEELER-3  | Surface Distance |     | -0.005 | ±0.100 | -0.005 | Pass |
| FEELER-4  | Surface Distance |     | 0.038  | ±0.100 | 0.038  | Pass |
| FEELER-5  | Surface Distance |     | 0.096  | ±0.100 | 0.096  | Pass |
| FEELER-6  | Surface Distance |     | 0.046  | ±0.100 | 0.046  | Pass |
| FEELER-7  | Surface Distance |     | 0.003  | ±0.100 | 0.003  | Pass |
| FEELER-8  | Surface Distance |     | 0.052  | ±0.100 | 0.052  | Pass |
| FEELER-9  | Surface Distance |     | -0.018 | ±0.100 | -0.018 | Pass |
| FEELER-10 | Surface Distance |     | 0.054  | ±0.100 | 0.054  | Pass |
| FEELER-11 | Surface Distance |     | 0.008  | ±0.100 | 0.008  | Pass |
| FEELER-12 | Surface Distance |     | 0.072  | ±0.100 | 0.072  | Pass |
| FEELER-13 | Surface Distance |     | 0.073  | ±0.100 | 0.073  | Pass |
| FEELER-14 | Surface Distance |     | 0.073  | ±0.100 | 0.073  | Pass |
| FEELER-15 | Surface Distance |     | 0.027  | ±0.100 | 0.027  | Pass |
| FEELER-16 | Surface Distance |     | 0.076  | ±0.100 | 0.076  | Pass |
| FEELER-17 | Surface Distance |     | -0.039 | ±0.100 | -0.039 | Pass |
| FEELER-18 | Surface Distance |     | 0.075  | ±0.100 | 0.075  | Pass |
| FEELER-19 | Surface Distance |     | 0.050  | ±0.100 | 0.050  | Pass |

**Customer:** WHITEHALL INDUSTRIES  
**Operator:** Felipe Martinez  
**E-mail:** felipe.martinez@mess.com.mx

**Part name:** G3623A  
**Part number:** 30026505  
**Piece:** pieza 1



|                                                                                     |           |                  |        |        |        |      |
|-------------------------------------------------------------------------------------|-----------|------------------|--------|--------|--------|------|
|    | FEELER-20 | Surface Distance | 0.083  | ±0.100 | 0.083  | Pass |
|    | FEELER-21 | Surface Distance | -0.053 | ±0.100 | -0.053 | Pass |
|    | FEELER-22 | Surface Distance | 0.083  | ±0.100 | 0.083  | Pass |
|    | FEELER-23 | Surface Distance | 0.054  | ±0.100 | 0.054  | Pass |
|    | FEELER-24 | Surface Distance | -0.086 | ±0.100 | -0.086 | Pass |
|    | FEELER-25 | Surface Distance | 0.017  | ±0.100 | 0.017  | Pass |
|    | FEELER-26 | Surface Distance | -0.011 | ±0.100 | -0.011 | Pass |
|    | FEELER-27 | Surface Distance | 0.076  | ±0.100 | 0.076  | Pass |
|    | FEELER-28 | Surface Distance | -0.028 | ±0.100 | -0.028 | Pass |
|    | FEELER-29 | Surface Distance | -0.094 | ±0.100 | -0.094 | Pass |
|    | FEELER-30 | Surface Distance | -0.011 | ±0.100 | -0.011 | Pass |
|    | FEELER-31 | Surface Distance | 0.100  | ±0.100 | 0.100  | Pass |
|    | FEELER-32 | Surface Distance | 0.025  | ±0.100 | 0.025  | Pass |
|    | FEELER-33 | Surface Distance | 0.091  | ±0.100 | 0.091  | Pass |
|    | FEELER-34 | Surface Distance | -0.008 | ±0.100 | -0.008 | Pass |
|    | FEELER-35 | Surface Distance | 0.070  | ±0.100 | 0.070  | Pass |
|    | FEELER-36 | Surface Distance | -0.039 | ±0.100 | -0.039 | Pass |
|    | FEELER-37 | Surface Distance | -0.013 | ±0.100 | -0.013 | Pass |
|    | FEELER-38 | Surface Distance | -0.066 | ±0.100 | -0.066 | Pass |
|    | FEELER-39 | Surface Distance | -0.034 | ±0.100 | -0.034 | Pass |
|    | FEELER-40 | Surface Distance | -0.088 | ±0.100 | -0.088 | Pass |
|    | FEELER-41 | Surface Distance | -0.004 | ±0.100 | -0.004 | Pass |
|   | FEELER-42 | Surface Distance | -0.081 | ±0.100 | -0.081 | Pass |
|  | FEELER-43 | Surface Distance | 0.007  | ±0.100 | 0.007  | Pass |
|  | FEELER-44 | Surface Distance | -0.058 | ±0.100 | -0.058 | Pass |
|  | FEELER-45 | Surface Distance | -0.020 | ±0.100 | -0.020 | Pass |
|  | FEELER-46 | Surface Distance | -0.093 | ±0.100 | -0.093 | Pass |
|  | FEELER-47 | Surface Distance | 0.025  | ±0.100 | 0.025  | Pass |
|  | FEELER-48 | Surface Distance | 0.067  | ±0.100 | 0.067  | Pass |
|  | FEELER-49 | Surface Distance | 0.043  | ±0.100 | 0.043  | Pass |
|  | FEELER-50 | Surface Distance | 0.024  | ±0.100 | 0.024  | Pass |
|  | FEELER-51 | Surface Distance | 0.035  | ±0.100 | 0.035  | Pass |
|  | FEELER-52 | Surface Distance | 0.014  | ±0.100 | 0.014  | Pass |
|  | FEELER-53 | Surface Distance | 0.040  | ±0.100 | 0.040  | Pass |
|  | FEELER-54 | Surface Distance | 0.005  | ±0.100 | 0.005  | Pass |
|  | FEELER-55 | Surface Distance | 0.032  | ±0.100 | 0.032  | Pass |
|  | FEELER-56 | Surface Distance | -0.003 | ±0.100 | -0.003 | Pass |
|  | FEELER-57 | Surface Distance | 0.048  | ±0.100 | 0.048  | Pass |
|  | FEELER-58 | Surface Distance | -0.016 | ±0.100 | -0.016 | Pass |
|  | FEELER-59 | Surface Distance | 0.050  | ±0.100 | 0.050  | Pass |
|  | FEELER-60 | Surface Distance | -0.015 | ±0.100 | -0.015 | Pass |
|  | FEELER-61 | Surface Distance | 0.010  | ±0.100 | 0.010  | Pass |
|  | FEELER-62 | Surface Distance | -0.018 | ±0.100 | -0.018 | Pass |
|  | FEELER-63 | Surface Distance | -0.021 | ±0.100 | -0.021 | Pass |
|  | FEELER-64 | Surface Distance | 0.016  | ±0.100 | 0.016  | Pass |
|  | FEELER-65 | Surface Distance | 0.000  | ±0.100 | 0.000  | Pass |

**Customer:** WHITEHALL INDUSTRIES  
**Operator:** Felipe Martinez  
**E-mail:** felipe.martinez@mess.com.mx

**Part name:** G3623A  
**Part number:** 30026505  
**Piece:** pieza 1




|                                                                                     |            |                  |        |        |        |      |
|-------------------------------------------------------------------------------------|------------|------------------|--------|--------|--------|------|
|    | FEELER-66  | Surface Distance | 0.034  | ±0.100 | 0.034  | Pass |
|    | FEELER-67  | Surface Distance | -0.030 | ±0.100 | -0.030 | Pass |
|    | FEELER-68  | Surface Distance | 0.001  | ±0.100 | 0.001  | Pass |
|    | FEELER-69  | Surface Distance | -0.038 | ±0.100 | -0.038 | Pass |
|    | FEELER-70  | Surface Distance | -0.006 | ±0.100 | -0.006 | Pass |
|    | FEELER-71  | Surface Distance | -0.021 | ±0.100 | -0.021 | Pass |
|    | FEELER-72  | Surface Distance | -0.012 | ±0.100 | -0.012 | Pass |
|    | FEELER-73  | Surface Distance | -0.039 | ±0.100 | -0.039 | Pass |
|    | FEELER-74  | Surface Distance | -0.008 | ±0.100 | -0.008 | Pass |
|    | FEELER-75  | Surface Distance | -0.041 | ±0.100 | -0.041 | Pass |
|    | FEELER-76  | Surface Distance | -0.018 | ±0.100 | -0.018 | Pass |
|    | FEELER-77  | Surface Distance | -0.042 | ±0.100 | -0.042 | Pass |
|    | FEELER-78  | Surface Distance | -0.048 | ±0.100 | -0.048 | Pass |
|    | FEELER-79  | Surface Distance | 0.020  | ±0.100 | 0.020  | Pass |
|    | FEELER-80  | Surface Distance | -0.021 | ±0.100 | -0.021 | Pass |
|    | FEELER-81  | Surface Distance | -0.001 | ±0.100 | -0.001 | Pass |
|    | FEELER-82  | Surface Distance | -0.039 | ±0.100 | -0.039 | Pass |
|    | FEELER-83  | Surface Distance | -0.007 | ±0.100 | -0.007 | Pass |
|    | FEELER-84  | Surface Distance | -0.038 | ±0.100 | -0.038 | Pass |
|    | FEELER-85  | Surface Distance | 0.000  | ±0.100 | 0.000  | Pass |
|    | FEELER-86  | Surface Distance | -0.041 | ±0.100 | -0.041 | Pass |
|    | FEELER-87  | Surface Distance | 0.026  | ±0.100 | 0.026  | Pass |
|   | FEELER-88  | Surface Distance | -0.047 | ±0.100 | -0.047 | Pass |
|  | FEELER-89  | Surface Distance | 0.006  | ±0.100 | 0.006  | Pass |
|  | FEELER-90  | Surface Distance | -0.039 | ±0.100 | -0.039 | Pass |
|  | FEELER-91  | Surface Distance | -0.003 | ±0.100 | -0.003 | Pass |
|  | FEELER-92  | Surface Distance | -0.032 | ±0.100 | -0.032 | Pass |
|  | FEELER-93  | Surface Distance | 0.007  | ±0.100 | 0.007  | Pass |
|  | FEELER-94  | Surface Distance | -0.031 | ±0.100 | -0.031 | Pass |
|  | FEELER-95  | Surface Distance | 0.035  | ±0.100 | 0.035  | Pass |
|  | FEELER-96  | Surface Distance | -0.036 | ±0.100 | -0.036 | Pass |
|  | FEELER-97  | Surface Distance | 0.015  | ±0.100 | 0.015  | Pass |
|  | FEELER-98  | Surface Distance | -0.021 | ±0.100 | -0.021 | Pass |
|  | FEELER-99  | Surface Distance | 0.017  | ±0.100 | 0.017  | Pass |
|  | FEELER-100 | Surface Distance | -0.001 | ±0.100 | -0.001 | Pass |
|  | FEELER-101 | Surface Distance | 0.037  | ±0.100 | 0.037  | Pass |
|  | FEELER-102 | Surface Distance | -0.004 | ±0.100 | -0.004 | Pass |
|  | FEELER-103 | Surface Distance | 0.055  | ±0.100 | 0.055  | Pass |
|  | FEELER-104 | Surface Distance | -0.001 | ±0.100 | -0.001 | Pass |
|  | FEELER-105 | Surface Distance | 0.009  | ±0.100 | 0.009  | Pass |
|  | FEELER-106 | Surface Distance | -0.013 | ±0.100 | -0.013 | Pass |

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1




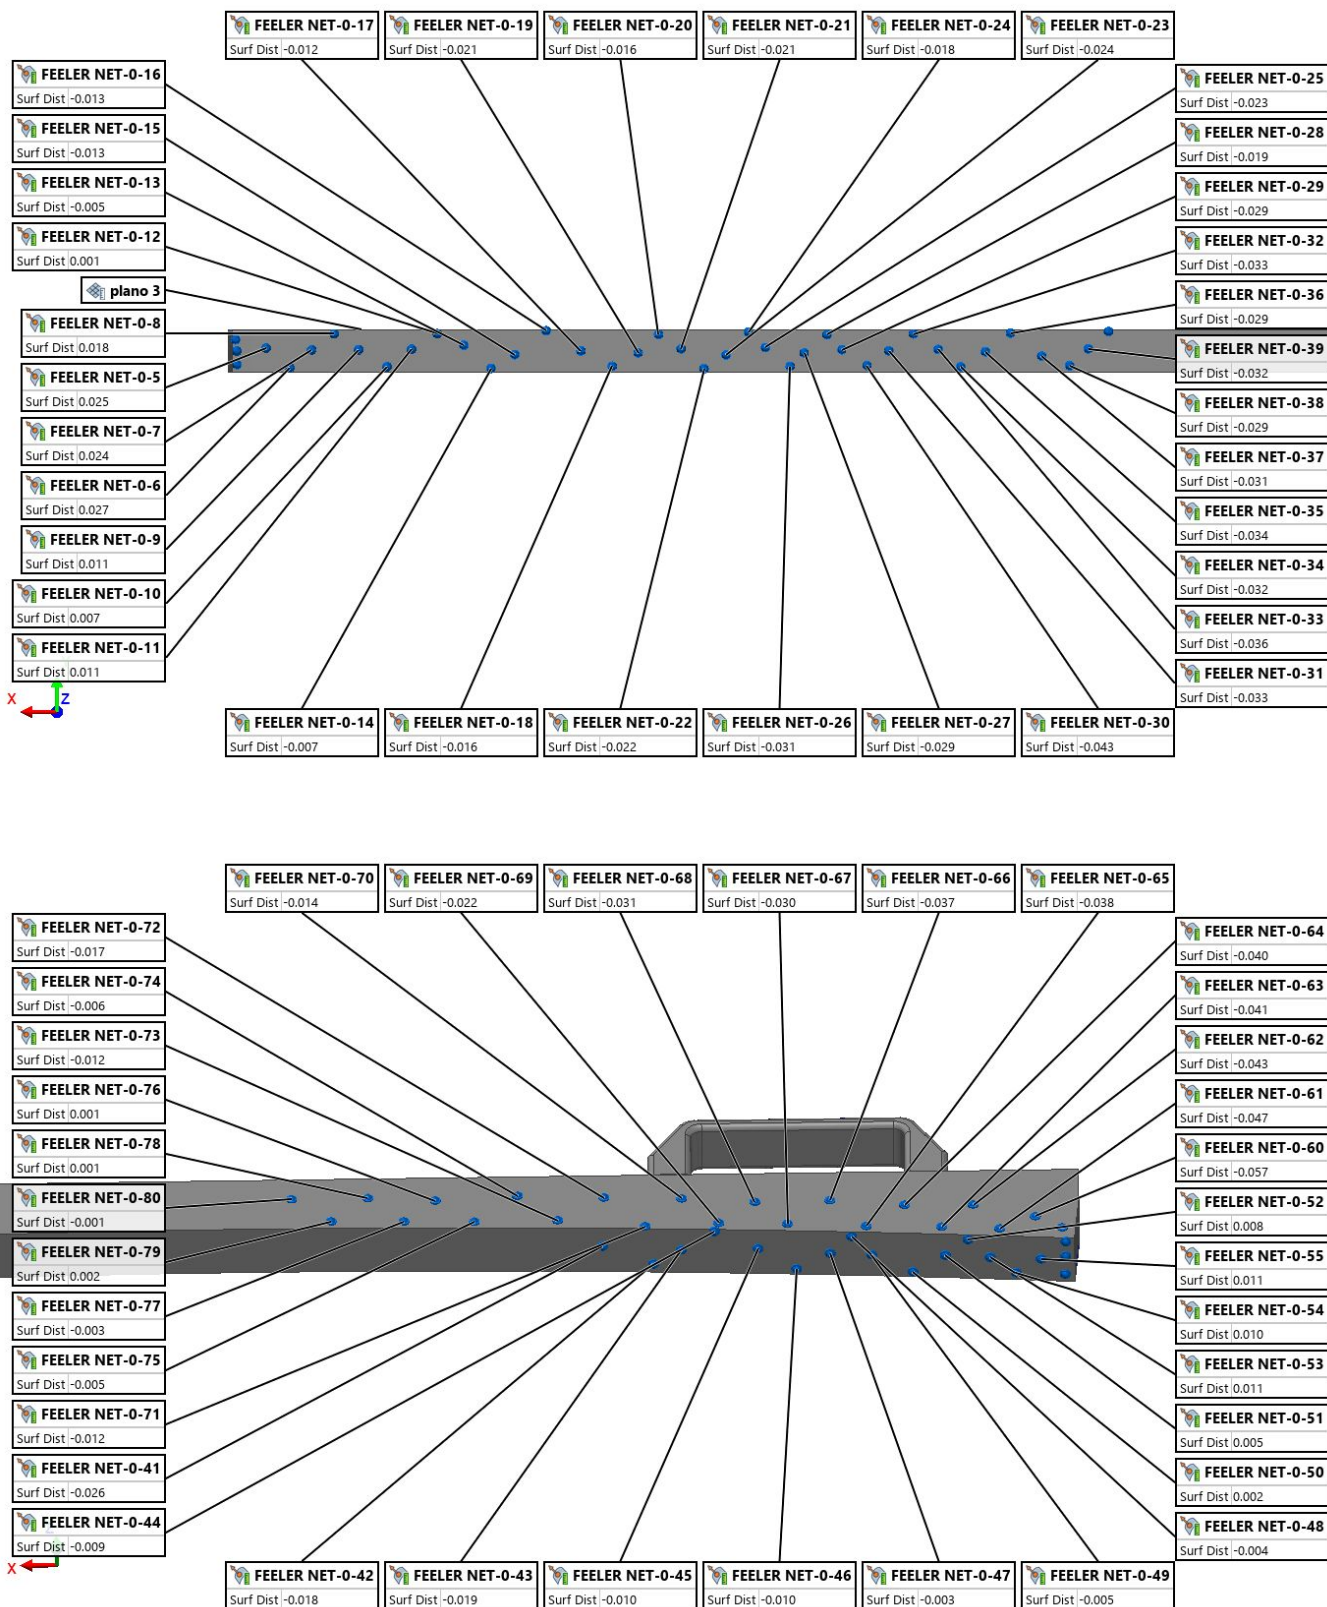

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1



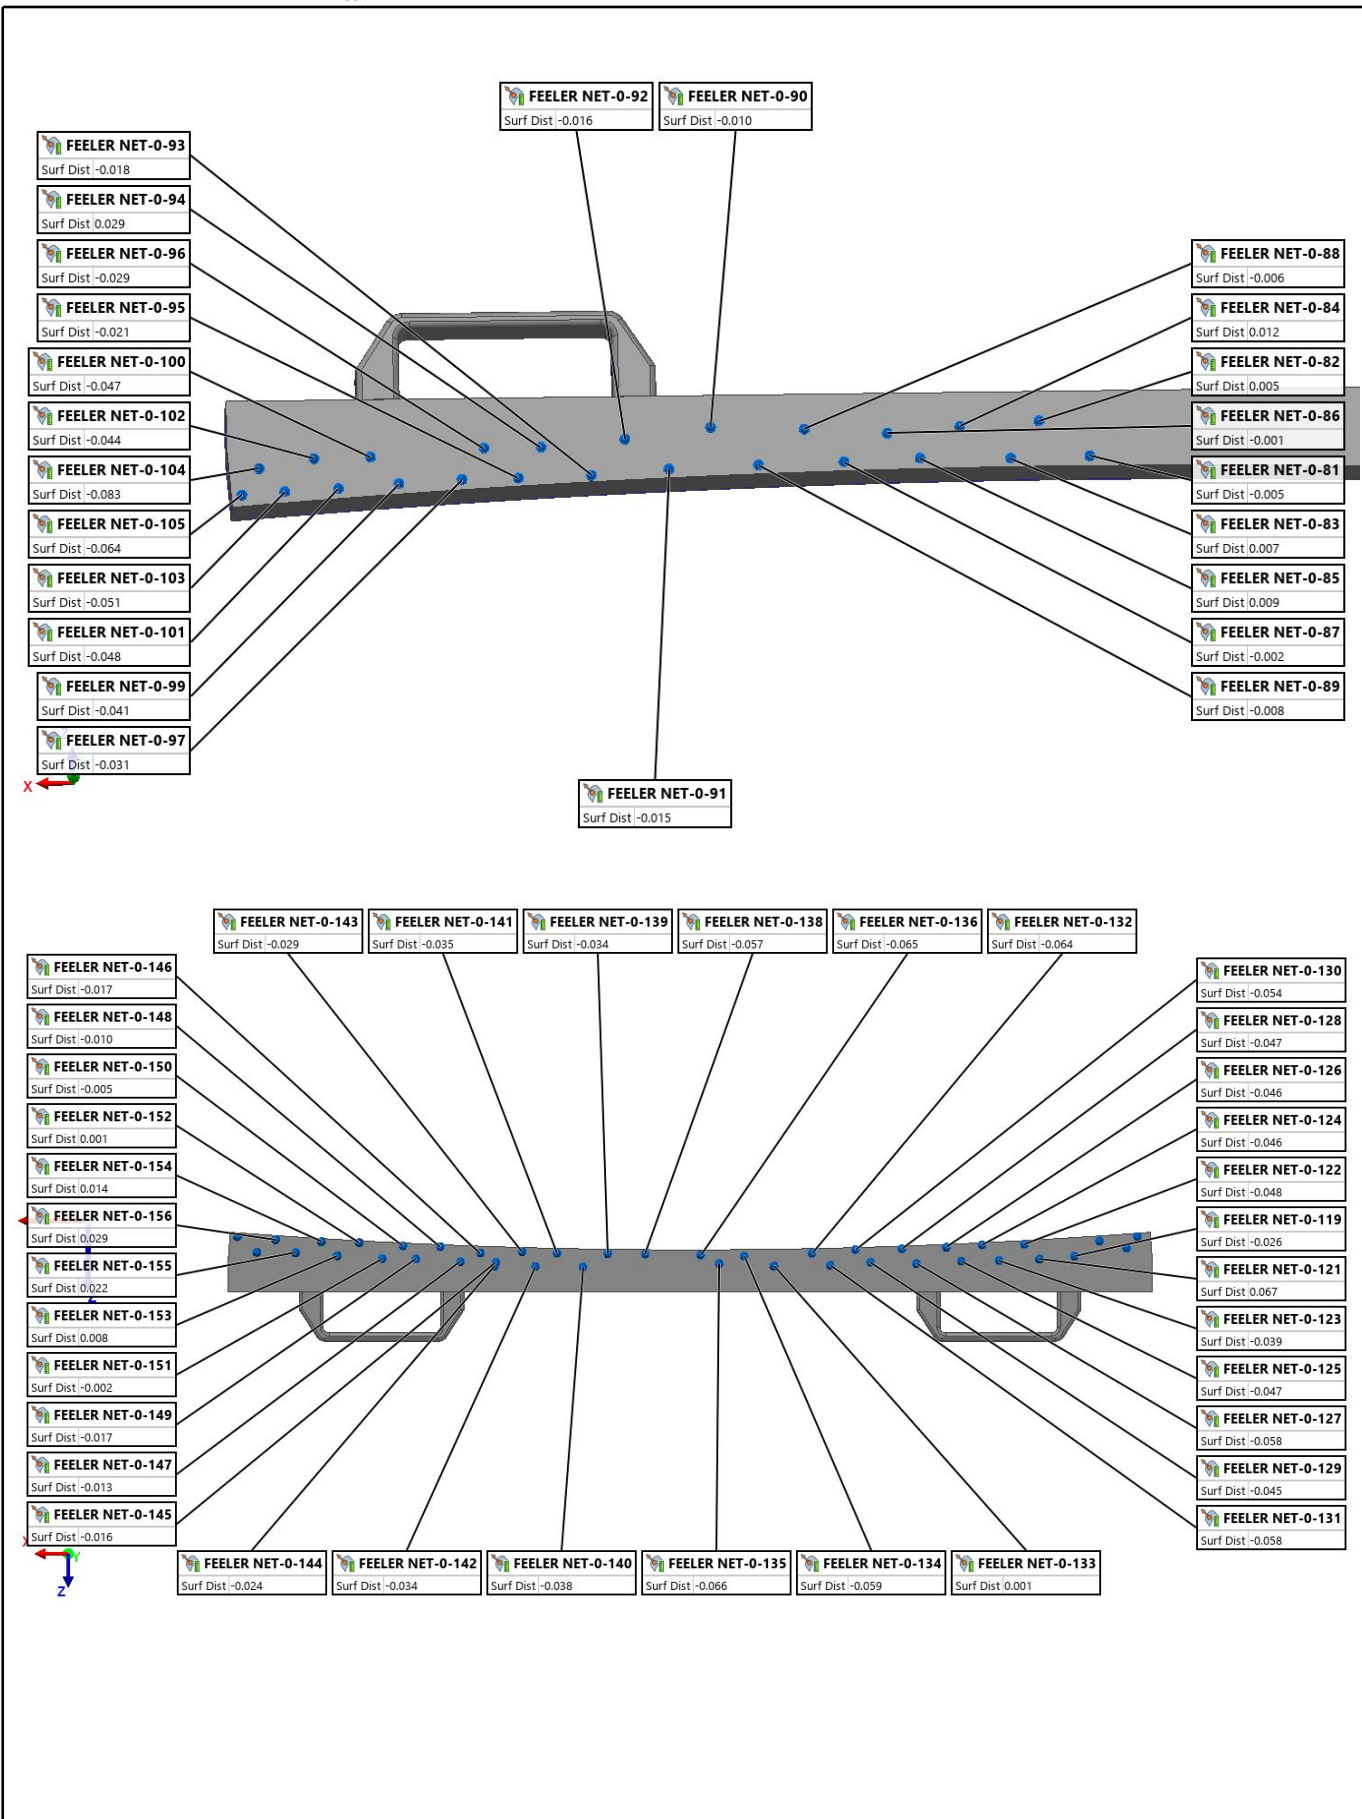

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1



## Comparison Point Table

Units Millimeters

| Name                                                                                                | Control          | Nom | Meas   | Tol    | Dev    | Test |
|-----------------------------------------------------------------------------------------------------|------------------|-----|--------|--------|--------|------|
|  FEELER NET-0-2    | Surface Distance |     | -0.042 | ±0.100 | -0.042 | Pass |
|  FEELER NET-0-3    | Surface Distance |     | 0.017  | ±0.100 | 0.017  | Pass |
|  FEELER NET-0-4    | Surface Distance |     | -0.037 | ±0.100 | -0.037 | Pass |
|  FEELER NET-0-5    | Surface Distance |     | 0.025  | ±0.100 | 0.025  | Pass |
|  FEELER NET-0-6    | Surface Distance |     | 0.027  | ±0.100 | 0.027  | Pass |
|  FEELER NET-0-7    | Surface Distance |     | 0.024  | ±0.100 | 0.024  | Pass |
|  FEELER NET-0-8    | Surface Distance |     | 0.018  | ±0.100 | 0.018  | Pass |
|  FEELER NET-0-9    | Surface Distance |     | 0.011  | ±0.100 | 0.011  | Pass |
|  FEELER NET-0-10   | Surface Distance |     | 0.007  | ±0.100 | 0.007  | Pass |
|  FEELER NET-0-11   | Surface Distance |     | 0.011  | ±0.100 | 0.011  | Pass |
|  FEELER NET-0-12   | Surface Distance |     | 0.001  | ±0.100 | 0.001  | Pass |
|  FEELER NET-0-13   | Surface Distance |     | -0.005 | ±0.100 | -0.005 | Pass |
|  FEELER NET-0-14   | Surface Distance |     | -0.007 | ±0.100 | -0.007 | Pass |
|  FEELER NET-0-15   | Surface Distance |     | -0.013 | ±0.100 | -0.013 | Pass |
|  FEELER NET-0-16   | Surface Distance |     | -0.013 | ±0.100 | -0.013 | Pass |
|  FEELER NET-0-17  | Surface Distance |     | -0.012 | ±0.100 | -0.012 | Pass |
|  FEELER NET-0-18 | Surface Distance |     | -0.016 | ±0.100 | -0.016 | Pass |
|  FEELER NET-0-19 | Surface Distance |     | -0.021 | ±0.100 | -0.021 | Pass |
|  FEELER NET-0-20 | Surface Distance |     | -0.016 | ±0.100 | -0.016 | Pass |
|  FEELER NET-0-21 | Surface Distance |     | -0.021 | ±0.100 | -0.021 | Pass |
|  FEELER NET-0-22 | Surface Distance |     | -0.022 | ±0.100 | -0.022 | Pass |
|  FEELER NET-0-23 | Surface Distance |     | -0.024 | ±0.100 | -0.024 | Pass |
|  FEELER NET-0-24 | Surface Distance |     | -0.018 | ±0.100 | -0.018 | Pass |
|  FEELER NET-0-25 | Surface Distance |     | -0.023 | ±0.100 | -0.023 | Pass |
|  FEELER NET-0-26 | Surface Distance |     | -0.031 | ±0.100 | -0.031 | Pass |
|  FEELER NET-0-27 | Surface Distance |     | -0.029 | ±0.100 | -0.029 | Pass |
|  FEELER NET-0-28 | Surface Distance |     | -0.019 | ±0.100 | -0.019 | Pass |
|  FEELER NET-0-29 | Surface Distance |     | -0.029 | ±0.100 | -0.029 | Pass |
|  FEELER NET-0-30 | Surface Distance |     | -0.043 | ±0.100 | -0.043 | Pass |
|  FEELER NET-0-31 | Surface Distance |     | -0.033 | ±0.100 | -0.033 | Pass |
|  FEELER NET-0-32 | Surface Distance |     | -0.033 | ±0.100 | -0.033 | Pass |
|  FEELER NET-0-33 | Surface Distance |     | -0.036 | ±0.100 | -0.036 | Pass |
|  FEELER NET-0-34 | Surface Distance |     | -0.032 | ±0.100 | -0.032 | Pass |
|  FEELER NET-0-35 | Surface Distance |     | -0.034 | ±0.100 | -0.034 | Pass |
|  FEELER NET-0-36 | Surface Distance |     | -0.029 | ±0.100 | -0.029 | Pass |
|  FEELER NET-0-37 | Surface Distance |     | -0.031 | ±0.100 | -0.031 | Pass |
|  FEELER NET-0-38 | Surface Distance |     | -0.029 | ±0.100 | -0.029 | Pass |
|  FEELER NET-0-39 | Surface Distance |     | -0.032 | ±0.100 | -0.032 | Pass |
|  FEELER NET-0-40 | Surface Distance |     | -0.023 | ±0.100 | -0.023 | Pass |
|  FEELER NET-0-41 | Surface Distance |     | -0.026 | ±0.100 | -0.026 | Pass |
|  FEELER NET-0-42 | Surface Distance |     | -0.018 | ±0.100 | -0.018 | Pass |

Customer: WHITEHALL INDUSTRIES  
 Operator: Felipe Martinez  
 E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
 Part number: 30026505  
 Piece: pieza 1



|                                                                                     |                 |                  |        |        |        |      |
|-------------------------------------------------------------------------------------|-----------------|------------------|--------|--------|--------|------|
|    | FEELER NET-0-43 | Surface Distance | -0.019 | ±0.100 | -0.019 | Pass |
|    | FEELER NET-0-44 | Surface Distance | -0.009 | ±0.100 | -0.009 | Pass |
|    | FEELER NET-0-45 | Surface Distance | -0.010 | ±0.100 | -0.010 | Pass |
|    | FEELER NET-0-46 | Surface Distance | -0.010 | ±0.100 | -0.010 | Pass |
|    | FEELER NET-0-47 | Surface Distance | -0.003 | ±0.100 | -0.003 | Pass |
|    | FEELER NET-0-48 | Surface Distance | -0.004 | ±0.100 | -0.004 | Pass |
|    | FEELER NET-0-49 | Surface Distance | -0.005 | ±0.100 | -0.005 | Pass |
|    | FEELER NET-0-50 | Surface Distance | 0.002  | ±0.100 | 0.002  | Pass |
|    | FEELER NET-0-51 | Surface Distance | 0.005  | ±0.100 | 0.005  | Pass |
|    | FEELER NET-0-52 | Surface Distance | 0.008  | ±0.100 | 0.008  | Pass |
|    | FEELER NET-0-53 | Surface Distance | 0.011  | ±0.100 | 0.011  | Pass |
|    | FEELER NET-0-54 | Surface Distance | 0.010  | ±0.100 | 0.010  | Pass |
|    | FEELER NET-0-55 | Surface Distance | 0.011  | ±0.100 | 0.011  | Pass |
|    | FEELER NET-0-56 | Surface Distance | -0.057 | ±0.100 | -0.057 | Pass |
|    | FEELER NET-0-57 | Surface Distance | 0.012  | ±0.100 | 0.012  | Pass |
|    | FEELER NET-0-58 | Surface Distance | -0.028 | ±0.100 | -0.028 | Pass |
|    | FEELER NET-0-59 | Surface Distance | -0.063 | ±0.100 | -0.063 | Pass |
|    | FEELER NET-0-60 | Surface Distance | -0.057 | ±0.100 | -0.057 | Pass |
|    | FEELER NET-0-61 | Surface Distance | -0.047 | ±0.100 | -0.047 | Pass |
|    | FEELER NET-0-62 | Surface Distance | -0.043 | ±0.100 | -0.043 | Pass |
|    | FEELER NET-0-63 | Surface Distance | -0.041 | ±0.100 | -0.041 | Pass |
|    | FEELER NET-0-64 | Surface Distance | -0.040 | ±0.100 | -0.040 | Pass |
|    | FEELER NET-0-65 | Surface Distance | -0.038 | ±0.100 | -0.038 | Pass |
|    | FEELER NET-0-66 | Surface Distance | -0.037 | ±0.100 | -0.037 | Pass |
|    | FEELER NET-0-67 | Surface Distance | -0.030 | ±0.100 | -0.030 | Pass |
|   | FEELER NET-0-68 | Surface Distance | -0.031 | ±0.100 | -0.031 | Pass |
|  | FEELER NET-0-69 | Surface Distance | -0.022 | ±0.100 | -0.022 | Pass |
|  | FEELER NET-0-70 | Surface Distance | -0.014 | ±0.100 | -0.014 | Pass |
|  | FEELER NET-0-71 | Surface Distance | -0.012 | ±0.100 | -0.012 | Pass |
|  | FEELER NET-0-72 | Surface Distance | -0.017 | ±0.100 | -0.017 | Pass |
|  | FEELER NET-0-73 | Surface Distance | -0.012 | ±0.100 | -0.012 | Pass |
|  | FEELER NET-0-74 | Surface Distance | -0.006 | ±0.100 | -0.006 | Pass |
|  | FEELER NET-0-75 | Surface Distance | -0.005 | ±0.100 | -0.005 | Pass |
|  | FEELER NET-0-76 | Surface Distance | 0.001  | ±0.100 | 0.001  | Pass |
|  | FEELER NET-0-77 | Surface Distance | -0.003 | ±0.100 | -0.003 | Pass |
|  | FEELER NET-0-78 | Surface Distance | 0.001  | ±0.100 | 0.001  | Pass |
|  | FEELER NET-0-79 | Surface Distance | 0.002  | ±0.100 | 0.002  | Pass |
|  | FEELER NET-0-80 | Surface Distance | -0.001 | ±0.100 | -0.001 | Pass |
|  | FEELER NET-0-81 | Surface Distance | -0.005 | ±0.100 | -0.005 | Pass |
|  | FEELER NET-0-82 | Surface Distance | 0.005  | ±0.100 | 0.005  | Pass |
|  | FEELER NET-0-83 | Surface Distance | 0.007  | ±0.100 | 0.007  | Pass |
|  | FEELER NET-0-84 | Surface Distance | 0.012  | ±0.100 | 0.012  | Pass |
|  | FEELER NET-0-85 | Surface Distance | 0.009  | ±0.100 | 0.009  | Pass |
|  | FEELER NET-0-86 | Surface Distance | -0.001 | ±0.100 | -0.001 | Pass |
|  | FEELER NET-0-87 | Surface Distance | -0.002 | ±0.100 | -0.002 | Pass |
|  | FEELER NET-0-88 | Surface Distance | -0.006 | ±0.100 | -0.006 | Pass |

Customer: WHITEHALL INDUSTRIES  
Operator: Felipe Martinez  
E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
Part number: 30026505  
Piece: pieza 1



|                                                                                     |                  |                  |        |        |        |      |
|-------------------------------------------------------------------------------------|------------------|------------------|--------|--------|--------|------|
|    | FEELER NET-0-89  | Surface Distance | -0.008 | ±0.100 | -0.008 | Pass |
|    | FEELER NET-0-90  | Surface Distance | -0.010 | ±0.100 | -0.010 | Pass |
|    | FEELER NET-0-91  | Surface Distance | -0.015 | ±0.100 | -0.015 | Pass |
|    | FEELER NET-0-92  | Surface Distance | -0.016 | ±0.100 | -0.016 | Pass |
|    | FEELER NET-0-93  | Surface Distance | -0.018 | ±0.100 | -0.018 | Pass |
|    | FEELER NET-0-94  | Surface Distance | 0.029  | ±0.100 | 0.029  | Pass |
|    | FEELER NET-0-95  | Surface Distance | -0.021 | ±0.100 | -0.021 | Pass |
|    | FEELER NET-0-96  | Surface Distance | -0.029 | ±0.100 | -0.029 | Pass |
|    | FEELER NET-0-97  | Surface Distance | -0.031 | ±0.100 | -0.031 | Pass |
|    | FEELER NET-0-99  | Surface Distance | -0.041 | ±0.100 | -0.041 | Pass |
|    | FEELER NET-0-100 | Surface Distance | -0.047 | ±0.100 | -0.047 | Pass |
|    | FEELER NET-0-101 | Surface Distance | -0.048 | ±0.100 | -0.048 | Pass |
|    | FEELER NET-0-102 | Surface Distance | -0.044 | ±0.100 | -0.044 | Pass |
|    | FEELER NET-0-103 | Surface Distance | -0.051 | ±0.100 | -0.051 | Pass |
|    | FEELER NET-0-104 | Surface Distance | -0.083 | ±0.100 | -0.083 | Pass |
|    | FEELER NET-0-105 | Surface Distance | -0.064 | ±0.100 | -0.064 | Pass |
|    | FEELER NET-0-116 | Surface Distance | -0.014 | ±0.100 | -0.014 | Pass |
|    | FEELER NET-0-117 | Surface Distance | -0.009 | ±0.100 | -0.009 | Pass |
|    | FEELER NET-0-118 | Surface Distance | -0.022 | ±0.100 | -0.022 | Pass |
|    | FEELER NET-0-119 | Surface Distance | -0.026 | ±0.100 | -0.026 | Pass |
|    | FEELER NET-0-121 | Surface Distance | 0.067  | ±0.100 | 0.067  | Pass |
|    | FEELER NET-0-122 | Surface Distance | -0.048 | ±0.100 | -0.048 | Pass |
|   | FEELER NET-0-123 | Surface Distance | -0.039 | ±0.100 | -0.039 | Pass |
|  | FEELER NET-0-124 | Surface Distance | -0.046 | ±0.100 | -0.046 | Pass |
|  | FEELER NET-0-125 | Surface Distance | -0.047 | ±0.100 | -0.047 | Pass |
|  | FEELER NET-0-126 | Surface Distance | -0.046 | ±0.100 | -0.046 | Pass |
|  | FEELER NET-0-127 | Surface Distance | -0.058 | ±0.100 | -0.058 | Pass |
|  | FEELER NET-0-128 | Surface Distance | -0.047 | ±0.100 | -0.047 | Pass |
|  | FEELER NET-0-129 | Surface Distance | -0.045 | ±0.100 | -0.045 | Pass |
|  | FEELER NET-0-130 | Surface Distance | -0.054 | ±0.100 | -0.054 | Pass |
|  | FEELER NET-0-131 | Surface Distance | -0.058 | ±0.100 | -0.058 | Pass |
|  | FEELER NET-0-132 | Surface Distance | -0.064 | ±0.100 | -0.064 | Pass |
|  | FEELER NET-0-133 | Surface Distance | 0.001  | ±0.100 | 0.001  | Pass |
|  | FEELER NET-0-134 | Surface Distance | -0.059 | ±0.100 | -0.059 | Pass |
|  | FEELER NET-0-135 | Surface Distance | -0.066 | ±0.100 | -0.066 | Pass |
|  | FEELER NET-0-136 | Surface Distance | -0.065 | ±0.100 | -0.065 | Pass |
|  | FEELER NET-0-138 | Surface Distance | -0.057 | ±0.100 | -0.057 | Pass |
|  | FEELER NET-0-139 | Surface Distance | -0.034 | ±0.100 | -0.034 | Pass |
|  | FEELER NET-0-140 | Surface Distance | -0.038 | ±0.100 | -0.038 | Pass |
|  | FEELER NET-0-141 | Surface Distance | -0.035 | ±0.100 | -0.035 | Pass |
|  | FEELER NET-0-142 | Surface Distance | -0.034 | ±0.100 | -0.034 | Pass |
|  | FEELER NET-0-143 | Surface Distance | -0.029 | ±0.100 | -0.029 | Pass |
|  | FEELER NET-0-144 | Surface Distance | -0.024 | ±0.100 | -0.024 | Pass |
|  | FEELER NET-0-145 | Surface Distance | -0.016 | ±0.100 | -0.016 | Pass |
|  | FEELER NET-0-146 | Surface Distance | -0.017 | ±0.100 | -0.017 | Pass |
|  | FEELER NET-0-147 | Surface Distance | -0.013 | ±0.100 | -0.013 | Pass |

**Customer:** WHITEHALL INDUSTRIES  
**Operator:** Felipe Martinez  
**E-mail:** felipe.martinez@mess.com.mx

**Part name:** G3623A  
**Part number:** 30026505  
**Piece:** pieza 1



|                                                                                   |                  |                  |        |        |        |      |
|-----------------------------------------------------------------------------------|------------------|------------------|--------|--------|--------|------|
|  | FEELER NET-0-148 | Surface Distance | -0.010 | ±0.100 | -0.010 | Pass |
|  | FEELER NET-0-149 | Surface Distance | -0.017 | ±0.100 | -0.017 | Pass |
|  | FEELER NET-0-150 | Surface Distance | -0.005 | ±0.100 | -0.005 | Pass |
|  | FEELER NET-0-151 | Surface Distance | -0.002 | ±0.100 | -0.002 | Pass |
|  | FEELER NET-0-152 | Surface Distance | 0.001  | ±0.100 | 0.001  | Pass |
|  | FEELER NET-0-153 | Surface Distance | 0.008  | ±0.100 | 0.008  | Pass |
|  | FEELER NET-0-154 | Surface Distance | 0.014  | ±0.100 | 0.014  | Pass |
|  | FEELER NET-0-155 | Surface Distance | 0.022  | ±0.100 | 0.022  | Pass |
|  | FEELER NET-0-156 | Surface Distance | 0.029  | ±0.100 | 0.029  | Pass |
|  | FEELER NET-0-157 | Surface Distance | 0.035  | ±0.100 | 0.035  | Pass |
|  | FEELER NET-0-158 | Surface Distance | 0.040  | ±0.100 | 0.040  | Pass |

Customer: WHITEHALL INDUSTRIES  
 Operator: Felipe Martinez  
 E-mail: felipe.martinez@mess.com.mx

Part name: G3623A  
 Part number: 30026505  
 Piece: pieza 1

